

PANIC ALARM BUTTONS WITH POSITIONING

The ControlledCare SINGLE PUSH BUTTON (CCBTN)

can be used as a panic button, personal emergency response, or other remote push-button applications. When the button is pressed, an alarm event or action is generated. The wireless signal is supervised, meaning that events will not risk being unacknowledged.

The Qi Wireless charging option allow the buttons to be charged as needed, reducing its environmental impact and operational cost over its lifetime.



LOCATION AWARE AND REPORTING

Alarms include the physical location of the button when combined with ControlledCare's location beacons.



LONG BATTERY LIFE

20,000-1,000,000+ transmissions on a single battery, and a 4-12-year battery life*



PRESENCE AND LOST MODE

Automatic wake-up for presence and lost mode.



VISUAL AND AUDIO ALERTS

Visual LED light alarm mode and/or Internal Buzzer for auditory location notification.



AUTO ERROR REPORTING

Automatic error reporting through supervisory messages



LI-PO BATTERY AND QI WIRELESS CHARGING

User replaceable standard Li-Po battery and standard Qi Wireless Charge



AUTO REPORTING

Automatic low battery reporting and supervisory reporting



WEB INTERFACE

Built-in web configuration interface allows for easy setup and programming.




SPECIFICATIONS

- Size: 44mm (1.73") x 74mm (2.91") x 18mm (0.71")
- Weight: 47g (1.66oz)
- Sensors: temperature, acceleration
- Optional Sensors: humidity, baro-/altimeter and compass
- Soft touch user interface push button
- Buzzer and LED status alarm display
- Wireless standards: 802.11, WiMesh and LoRaWAN
- Fully integrated internal antenna
- 20,000 - 200,000+ transmissions on a single battery
- Standard Qi Wireless charging
- Over the air sensor configuration in the field
- Automatic low battery reporting
- Status and health reporting

APPLICATIONS

- Panic or emergency alert
- Silent alarm for hospitality employees
- Silent alarm for retail counters and gas stations
- Security guard alert
- Remote control
- Customer call button
- Personal Emergency Response (PERS) for seniors and healthcare facilities

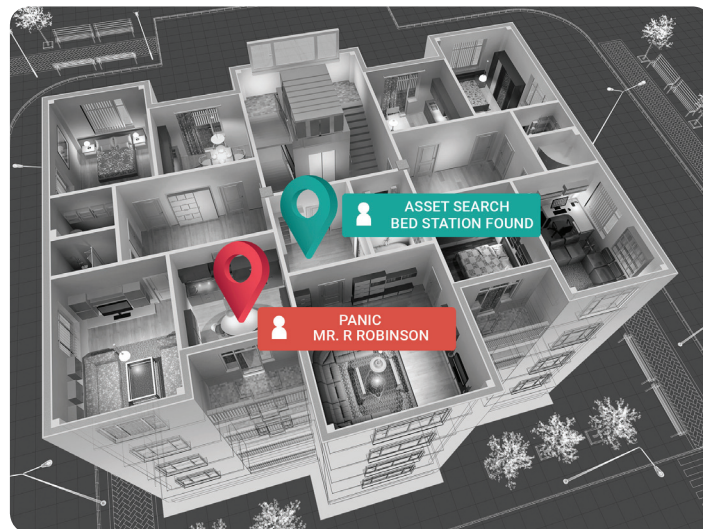

WWW.CONTROLLED CARE.COM

CONTROLLED CARE SYSTEMS HEALTH SOLUTIONS

109 Railside Road, Unit 305 M3A 1B2, Toronto, ON, Canada • Toll Free: 800.792.7137 • Phone: 416.623.5476
sales@controlledcare.com • www.controlledcare.com