

Features

- Customizable and size configurable.
- Use push button or pull cord to place a call.
- Choose whether to include pull cord during installation.
- Illuminated button for the status view.
- Call assurance LED flashes when call is placed.
- Water resistant with gasket for wet environments and easy cleaning.
- UL/cUL Listed.
- RoHS Compliant.

Description


The Station includes a call button, optional pull cord, an LED for call indication, a reset button, and an illuminated faceplate. The optional water-resistant seals allow the stations to be used in wet environments, such as showers, baths or tub rooms. When a call is placed, it is registered at the master station, room controller with dome light, zone lights, and duty station.

Configure the station's call type using the system's Config Tool software. Standard call types include emergency, code blue, and bath. The included inserts slide in to identify the buttons. Custom button call types and inserts can be created using the Config Tool software.

Mount the station using an Single-Gang Mounting Kit, or mount two stations together using an Dual-Gang Mounting Kit. The station snaps into the kit's plastic bezel and then onto the kit's surface mounting plate, leaving no visible screw holes.

CONTROLLED CARE SYSTEMS

305-109 Railside Road
Toronto, ON, M3A1B2, Canada

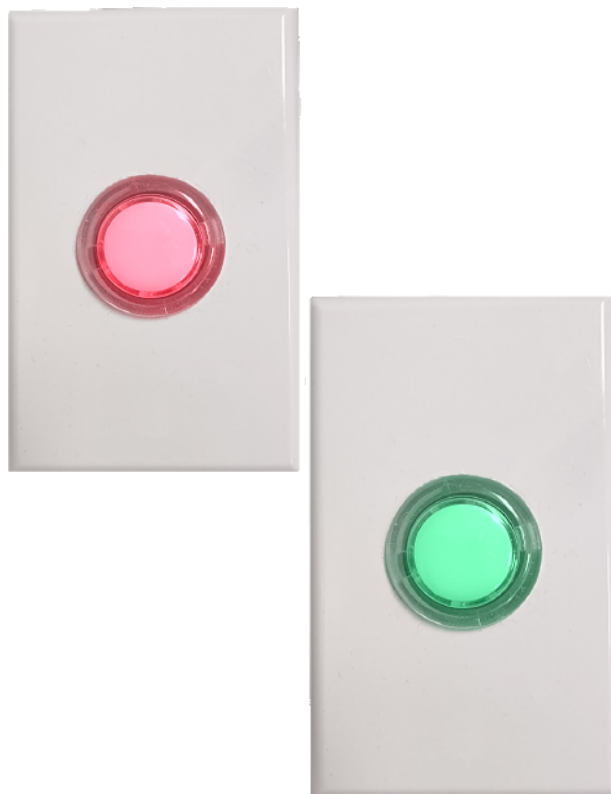

Specifications

Dimensions:	4.58"H × 3.25"W × 1.03"D (116 mm × 83 mm × 26 mm)
Environment:	0°C–60°C
Construction:	PC board with quality electronic components mounted on a flame-retardant (UL® 94V-0) plastic faceplate.
Mounting:	Attach included back plate to a standard single gang ring or single gang ring and box.
Connections:	2-wire flying lead